




very easy

burda sizes		45 ins / 114 cm								55 ins / 140 cm							
		32	34	36	38	40	42	44	46	32	34	36	38	40	42	44	46
yds		5/8	5/8	5/8	5/8	3/4	3/4	3/4	3/4	5/8	5/8	5/8	5/8	3/4	3/4	3/4	3/4
m		0.50	0.50	0.50	0.50	0.55	0.55	0.55	0.55	0.50	0.50	0.50	0.50	0.55	0.55	0.55	0.55
		→	→	→	→	→	→	→	→	→	→	→	→	→	→	→	→

→ with nap

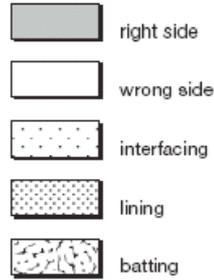

Patternpieces:

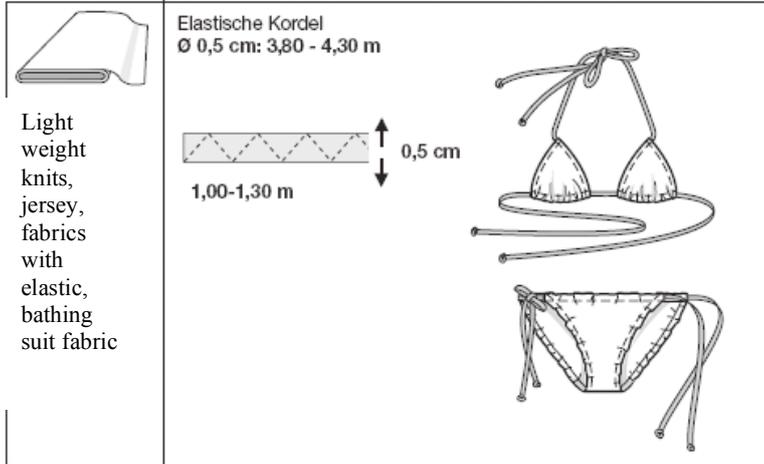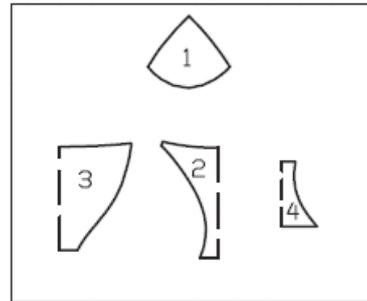

PATTERN

1 Bust 2x

2 Front of panty 1x

3 Back of panty 1x

4 Trimming 1x

Paper cut for US Letter (8 1/2" X 11") (German DIN A4) prints: The patterns are printed out on 8 sheets with a thin frame. Wait until all sheets are printed out. Arrange the sheets so that they fit together (see extra page with the overview of the prints). Cut off the single sheets in each case in the upper and right edge along the thin frame lines. Begin with the left lower sheet and then glue the parts in the frame lines together precisely.

Select your cut size according to the Burda size chart: Dresses, blouses, jackets and coats according to the bust size; trousers and skirts according to the hip width. Change the patterns about 2/5" (1 cm), if necessary, to fit your measurements if they deviate from the Burda size chart.

Cut out the pattern according to your size.

CUTTING

FOLD (---) means: here is the center of a pattern piece but never a cut edge or a seam. The piece should be cut double, with the fold line forming the center line. Pattern pieces that are outlined with a broken line in the cutting diagrams are to be placed face down on the fabric.


The cutting diagrams on the pattern sheet show how the pattern pieces should be placed on the fabric.

For a single layer of fabric, the pattern pieces are pinned to the right side. For double layers of fabric, the right sides are facing and the pattern pieces are pinned to the left side. The pattern pieces that are shown in the cutting diagram, extending over the fold of the fabric, should be cut last from a single layer of fabric.

SEAM AND HEMLINE ALLOWANCES are included: 5/8" (1.5 cm) in all edges and seams.

Use BURDA carbon paper to transfer all pattern lines and markings to the left side of the fabric pieces.

You will find the instructions in the packet.

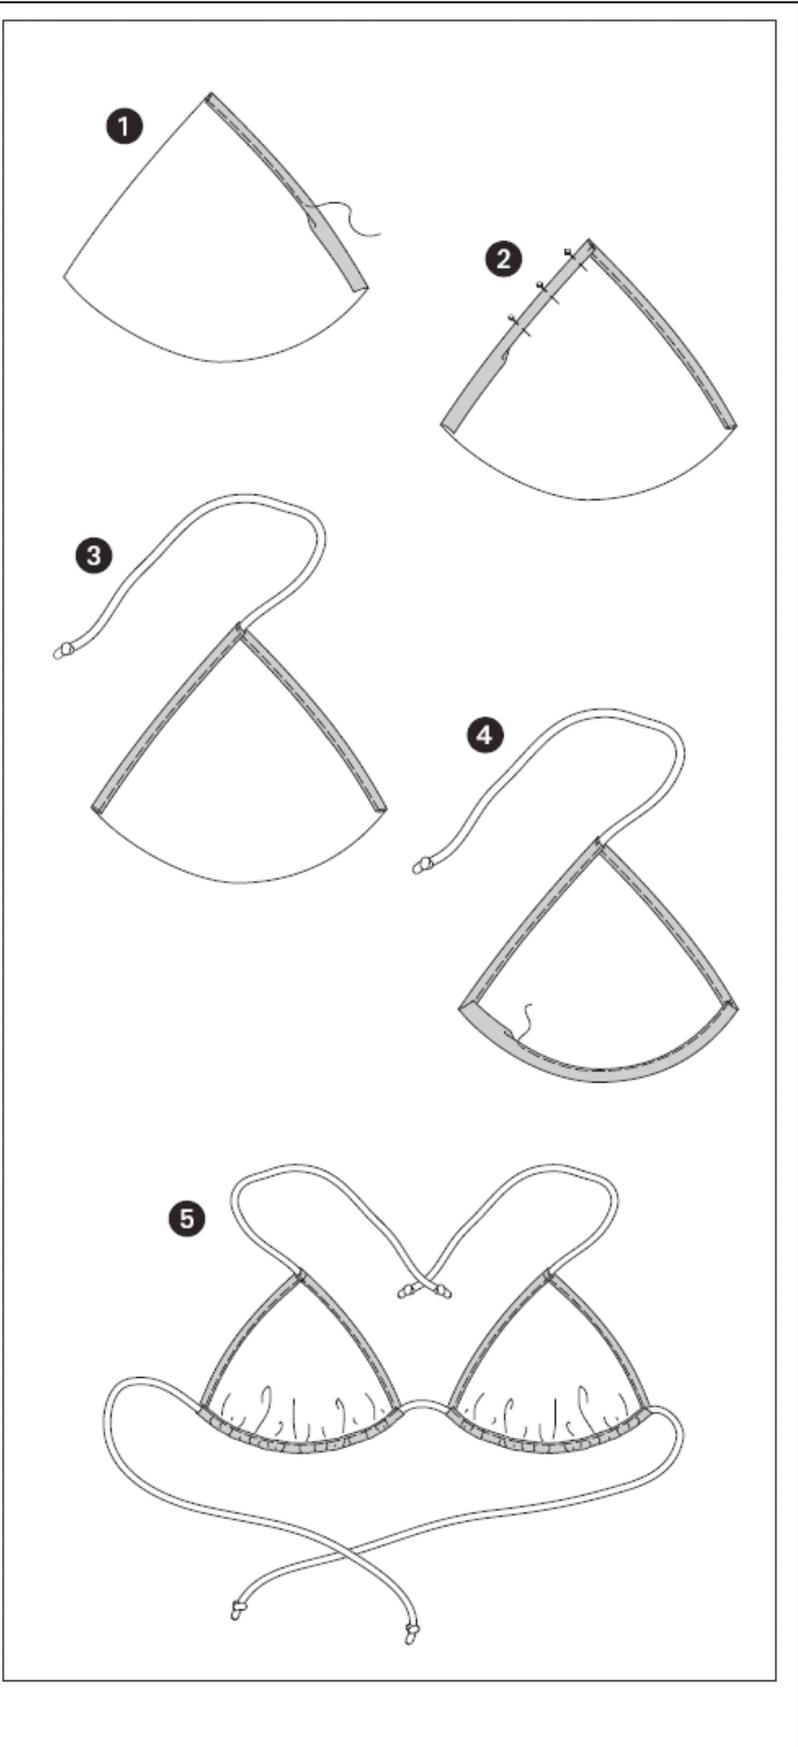

SEWING

When sewing, right sides of fabric should be facing each other.

Advice for Jersey:

To maintain the elasticity of the fabric, stitch seams with an elastic stitch, or stitch with level adjusted zigzag stitch. With fine mesh product use a Jersey needle. Its spherical point prevents mesh damage.

BIKINI

Top

1) Turn the side allowances of the bust parts inwards, press. Turn allowances inwards once again, pin and stitch close to the folded edge.

2) Then fold and press the front allowances inwards, pin.

3) Cut off 2 lengths of 18" (45 cm) from the cord for the shoulder straps. Position a cord end at the top of the bust piece under the allowance and pin. Stitch allowances of front edges close to the edge and stitch to hold the cord in place. Stitch the cord ends on top. Knot cord ends.

4) Neaten lower edges of the bust pieces. Press allowances inwards, fold narrowly and stitch 2/5" (1 cm) wide.

5) Cut off the elastic cord, for

Size 4: 42" (106 cm)

Size 6: 43 1/2" (110 cm)

Size 8: 45" (114 cm)

Size 10: 46 1/2" (118 cm)


Size 12: 48" (122 cm)

Size 14: 49 1/2" (126 cm)

Size 16: 51" (130 cm)

Size 18: 53" (134 cm)

Use a safety pin to pull it through the tunnel of the lower edges of the bust piece. Knot cord ends.

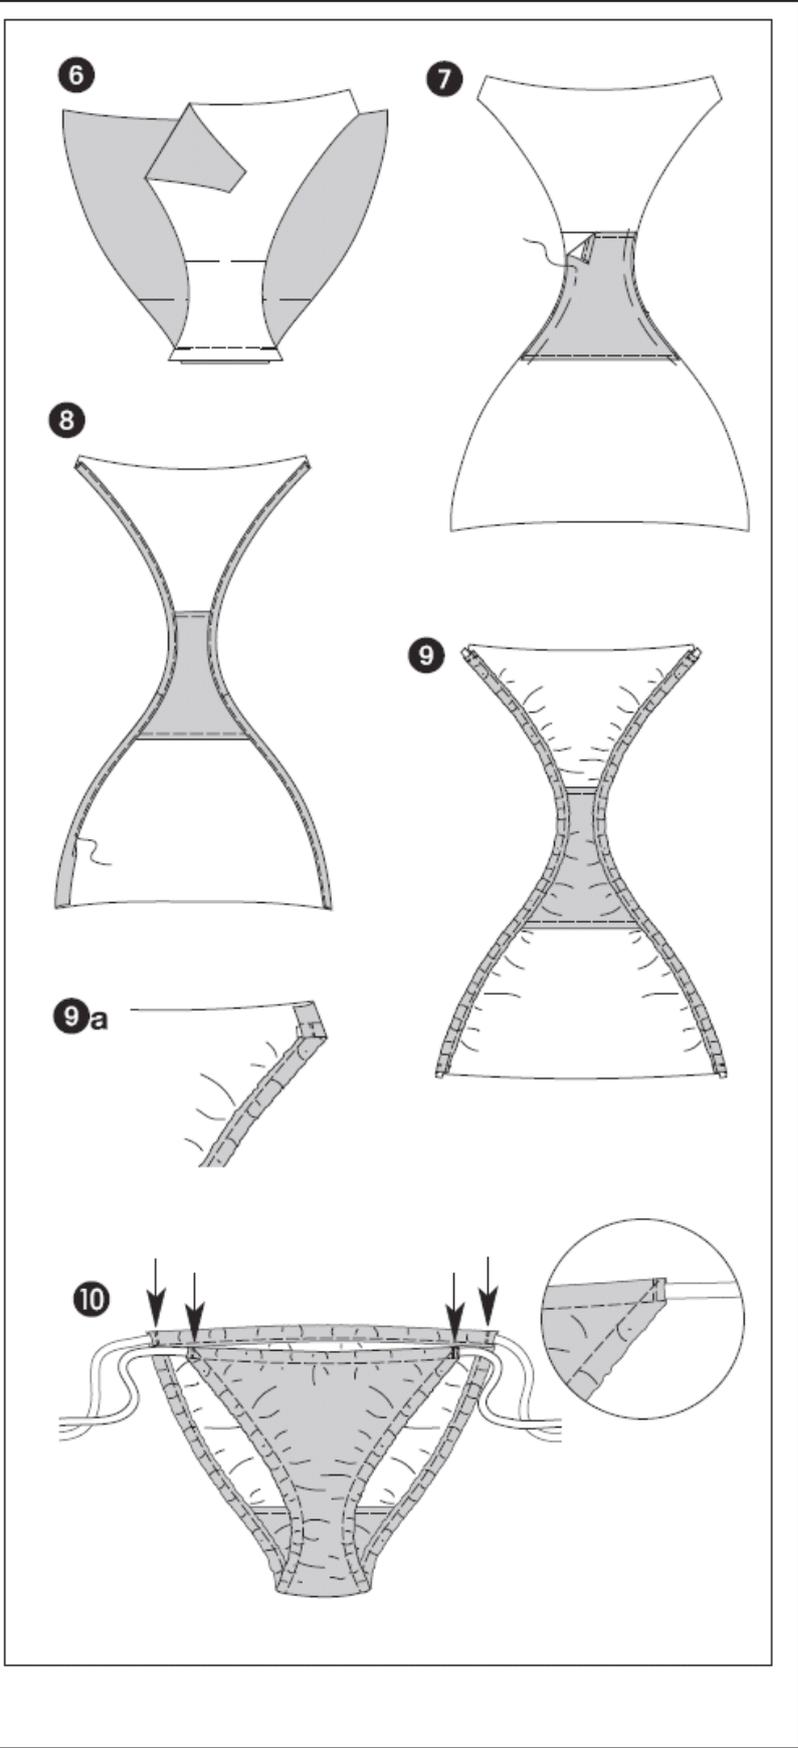

Panty

6) Lay front panty piece with right sides facing to back panty piece, pin crotch seam (seam 1) and stitch. Press seam allowances apart.

7) Trimmings (gusset):
 Fold and press allowances at the straight upper and lower edge and stitch. Position trimming on the panty's crotch with wrong sides facing, the edges meeting the marked lines. Pin trimming at the side. **TIP:** For more comfort cut the gusset from jersey fabric.

8) Turn allowances at the sides of the panty's edges inwards and press. Fold allowances and stitch 3/10" (0.7 cm).

- 9)** Cut off 2 pieces of elastic band, for
Size 4: 20" (50 cm)
Size 6: 20 1/2" (52 cm)
Size 8: 21" (54 cm)
Size 10: 22" (56 cm)
Size 12: 23" (58 cm)
Size 14: 23 1/2" (60 cm)
Size 16: 24 1/2" (62 cm)
Size 18: 25" (64 cm)

Pull cord, using a safety pin, inside the panty's edges. Stitch elastic cord ends onto the allowances. Turn the front panty's side allowances inwards (9a).

Stitch front and back of panty's upper edges according to description and drawing. Cut off 2 pieces of elastic cord, for Sizes 4 to 10 cut 35 1/2" (90 cm), for sizes 12 to 18 cut 39 1/2" (100 cm).

10) Pull cords, using a safety pin, and tighten slightly. **TIP:** So that the panty pieces do not move, stitch at the ends of the upper panty edges straight across the cords. (Arrows). Knot cord ends.