





average

fitted


## 6005 Shorts

burda sizes		55 ins / 140 cm						
		34	36	38	40	42	44	46
yds	1 1/8	1 1/8	1 1/8	1 1/8	1 1/8	1 1/8	1 1/8	1 1/8
m	1.00	1.00	1.20	1.20	1.20	1.20	1.20	1.20
	→	→	→	→	→	→	→	→

→ with nap

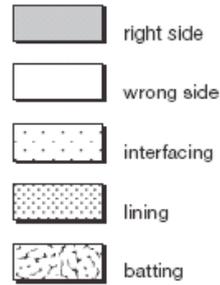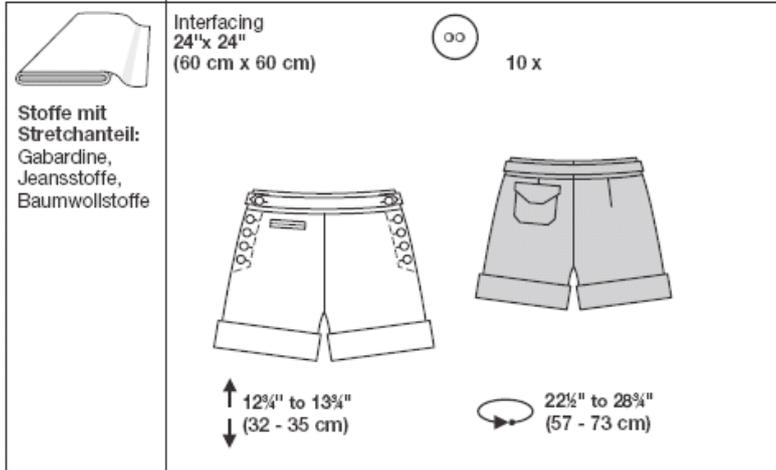

## Patternpieces:

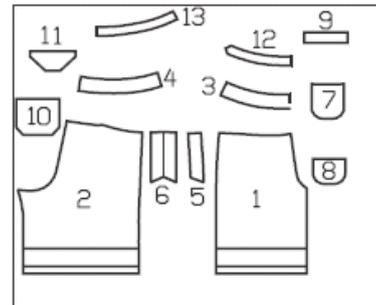

## PATTERN

- 1 Front pant 2x
- 2 Back pant 2x
- 3 Front waist band 2x
- 4 Back waist band 2x
- 5 Front Facing 2x
- 6 Underlap 2x
- 7 Pocket pouch 1x
- 8 Pocket pouch 1x
- 9 Pocket welt 2x
- 10 Pocket 1x
- 11 Cover 2x
- 12 Front belt 2x
- 13 Back belt 2x

## Paper cut for US Letter (8 1/2" X 11") (German DIN A4) prints:

The patterns are printed out on 16 sheets with a thin frame. Wait, until all sheets are printed out. Arrange the sheets so that they fit together (see extra page with the overview of the prints). Cut off the single sheets on the upper and right edge along the thin frame lines. Begin with the left lower sheet and then glue the parts in the frame lines together precisely.

Select your size according to the Burda size chart: Dresses, blouses, jackets and coats according to the bust size; trousers and skirts according to the hip width. Change the patterns according to size if necessary, to fit your measurements if they deviate from the Burda size chart.

## Cut out the pattern according to your size.

Upper waist band edge = 1 3/5" (4 cm) below the waist.  
**Sizes 36 to 46:** In part 1 mark the buttonholes and the stitch line at the same width to the side edge and upper pant edge as size 34 mark. In part 3 and 12 mark the buttonhole at the same width to the edges as size 34.

## LENGTHENING OR SHORTENING THE PATTERN PIECES

Our pattern is calculated for a height of 5' 6" (168 cm). If you are taller or shorter, you may adjust the pattern to fit your size at the lines marked "lengthen or shorten here". Thus the fit is preserved.

Make sure that you adjust all pieces of one model by the same amount at the same lines.

## How to lengthen and shorten pattern pieces:

Cut the pattern pieces along the marked lines.

To **lengthen**, slide the two halves of the pattern piece as far apart as necessary.

To **shorten**, overlap the two halves of the pattern piece as far as necessary. Even out the side edges.

## CUTTING OUT

**FOLD (---)** means: here is the center of a pattern piece but never a cut edge or a seam. The piece should be cut double, with the fold line forming the center line.


Pattern pieces that are outlined with a broken line in the cutting diagrams are to be placed face down on the fabric.

## The cutting diagrams on the pattern sheet show how the pattern pieces should be placed on the fabric.

For a single layer of fabric, the pattern pieces are pinned to the right side. For double layers of fabric, the right sides are facing and the pattern pieces are pinned to the left side. The pattern pieces that are shown in the cutting diagram, extending over the fold of the fabric, should be cut last from a single layer of fabric.

## SEAM AND HEMLINE ALLOWANCES are included on an average:

3/4" (2 cm) for the hem, 5/8" (1.5 cm) for all edges and stitches. Use BURDA carbon paper to transfer all pattern lines and markings to the left side of the fabric pieces. You will find instructions in the packet.

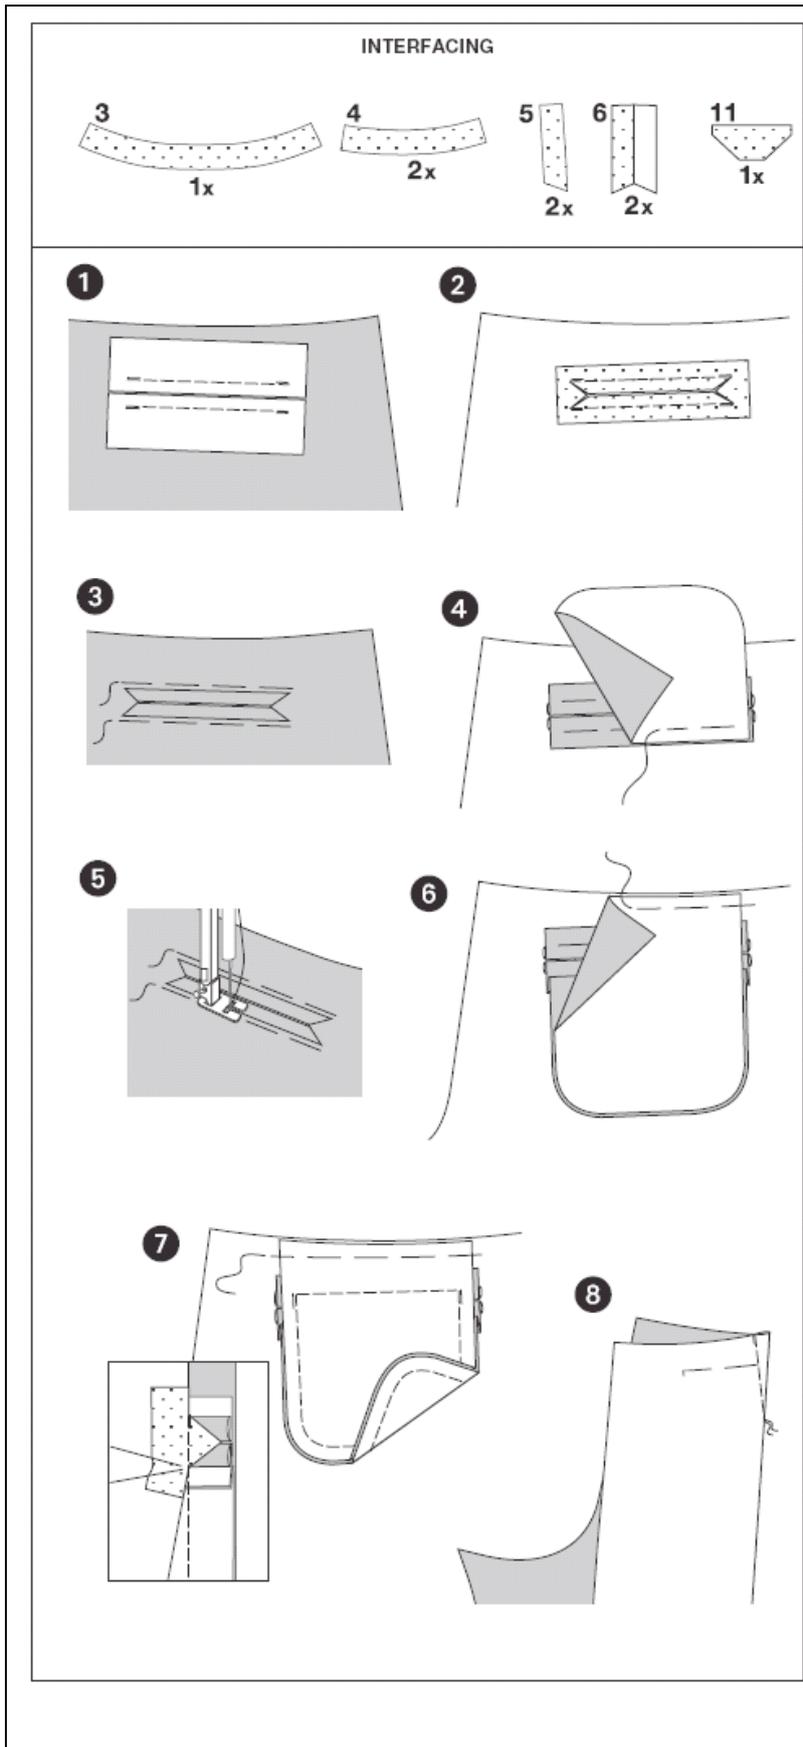

### Interfacing

Cut interfacing according to the drawing and press onto the left fabric side

### SEWING

**When sewing the right fabric sides are facing.**

Transfer all lines on the pattern using a basting stitch to the right fabric side.

### SHORTS

#### Bound pocket /right front pant

Press a strip of interfacing onto the wrong side of the fabric of the right front pant piece over the marked lines of the pocket. (drawing 2).

Important for sizes **36 to 46**: Draw in lines between the end marks of the pocket on the front left pant leg. Between those lines, draw the cutting line, around 1/2" (1.3 cm) shorter at each end. Transfer lines to right side of fabric using basting stitches.

**1)** Baste pocket welts onto both sides of the cutting edge of the front pant piece and stitch using 3/8" (0.7 cm). Secure seam ends.

**2)** Cut pant piece between the stitching lines along the cutting marks and cut diagonally coming close to the last stitching line, forming little triangles. Don't cut into the piping tapes. Press the piping tapes onto the seam.

**3)** Turn the piping inwards and baste, approach from the right side, to make them of equal width and make them cover the cutting. Press.


**4)** Baste pocket pouch (piece 8) in such a way onto the left fabric side, that the even edge above the seam will be positioned below the piping.

**5)** Stitch exactly along the seam of the bottom piping, approaching from the right side. Thereby stitching the pocket pouch. Press pocket pouch downwards.

**6)** Pin the other pocket pouch onto the upper pant edge so that the bottom and side edges of the pocket pouches lay on top of each other. Approaching from the right, stitch along the seam of the upper piping, thereby closing the pocket pouch (see drawing 5).

**7)** Fold the triangles at the cutting ends inwards. Baste pocket pouches one on top of the other, cut, trim and stitch them together one on top of the other starting at the bottom pocket pouch; thereby beginning or ending at the seam of the upper piping. Stitch through the triangles.

**8)** Pin **Darts** of the back pant pieces and stitch peaked. Knot threads. Press darts towards the center back.

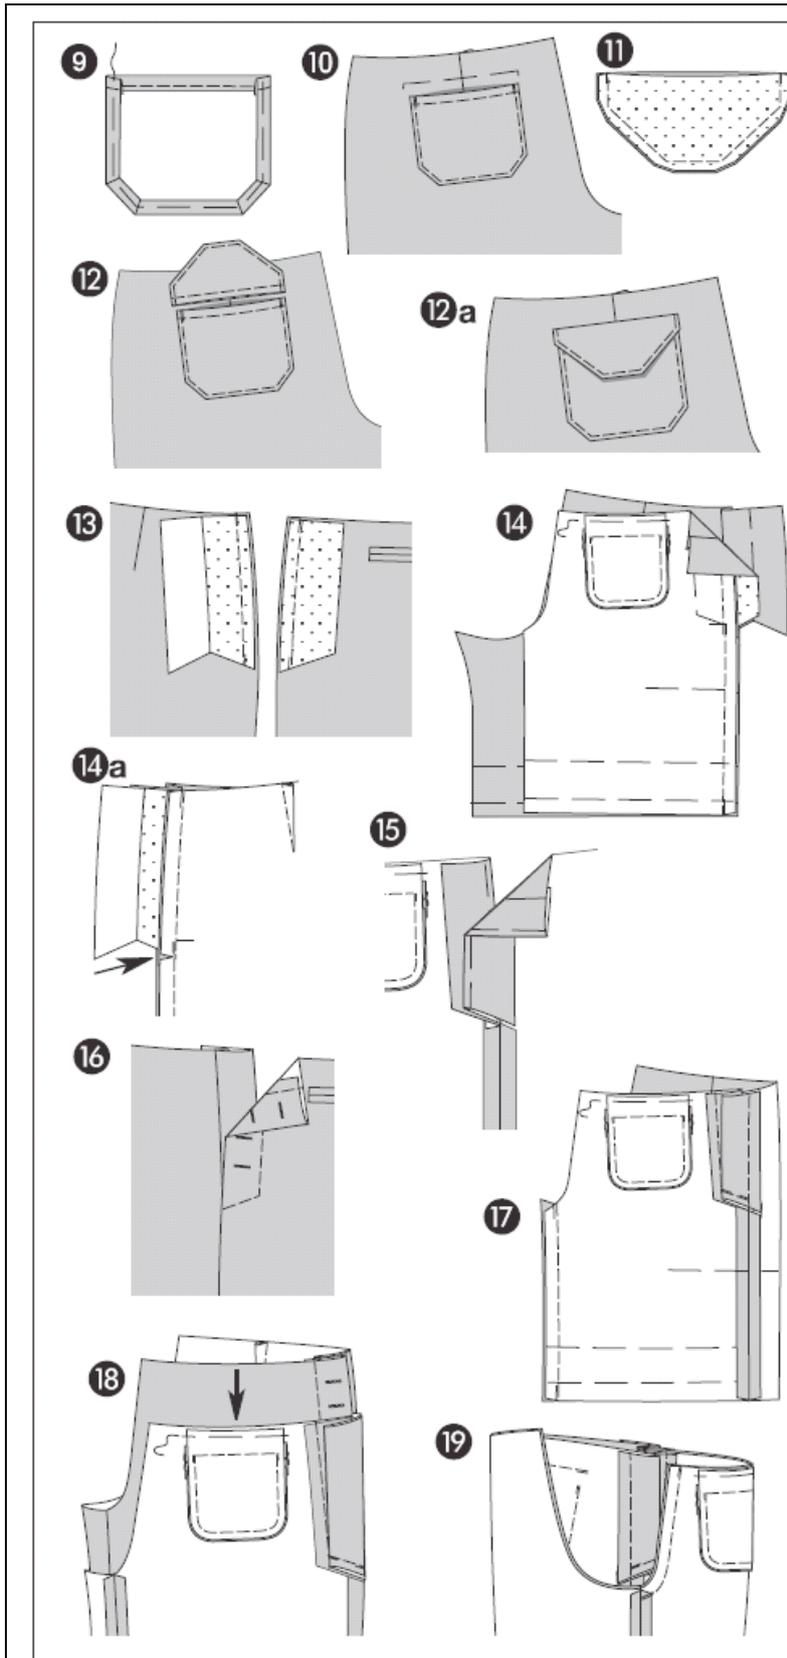

### Pocket /left back Pant piece

**9)** Neaten pocket edges. Fold and press the allowances of the upper edges, Stitch. Fold and baste the allowances of the bottom edges, press.

**10)** Baste pocket, meeting the line (where the pocket flap piece will be attached), onto the left back pant piece and topstitch narrowly.

### Pocket Flap

**11)** Pin pocket flap pieces on top of each other, right sides facing, baste edges on top of each other according to the drawing and stitch. Trim allowances and cut corners diagonally. Turn flap. Baste edges, press and topstitch the edges.

**12)** Stitch flap with upper side facing right side of pants, along the marked line. Secure seam ends. Press cover downwards (12a).

### Button facings

**13)** Baste facings for buttons onto the front pant piece, right sides facing (seam 1) and stitch. Secure seam ends. Baste underlap onto the back pant pieces, right sides facing (seam 2) and stitch. Secure seam ends. Press pieces in each case onto the beginning seam and neaten the other long trimming and underlap edge.

### Side seams

**14)** Position front pant pieces onto the back pant pieces, right sides facing, baste side seams from the slit mark all the way down (seam 4) and stitch. Secure seam ends. Clip the back pant parts along the underlap close to the stitching line (arrow 14a).

**15)** Neaten allowances and press apart, fold and baste the facing of the front pant piece inwards. Baste the facing of the underlap along the fold line inwards. Press edges. Stitch back pant pieces along the underlap beginning seam, thereby including the inner edge.

**16)** Stitch the front pant pieces according to the drawing, thereby stitch the facing. Do NOT include the underlap. Sew the buttonholes. Pin slit and stitch along the diagonal bottom stitch line, through both the facing and the underlap.









### Inside pant leg seams

**17)** Fold pant legs lengthwise, right side inwards. Baste inside pant legs (seam 5) and stitch. Trim allowances and press apart.

### Front center seam

**18)** Turn one pant leg inside out. Move pant legs, one inside the other, right fabric sides must be facing.

**19)** Stitch center seam along the front upper edge to the inside pant leg seams. Secure seam ends. Trim allowances.

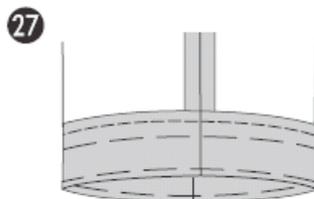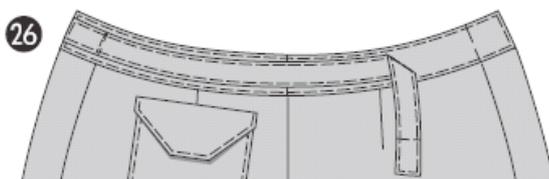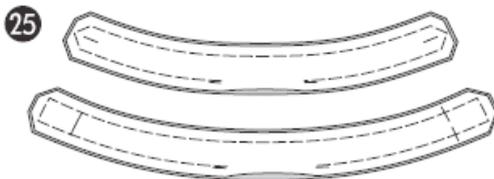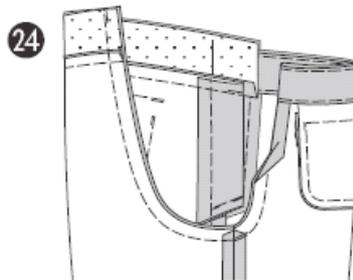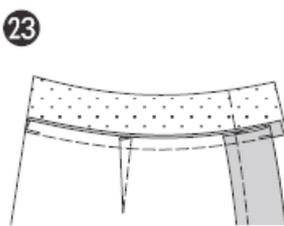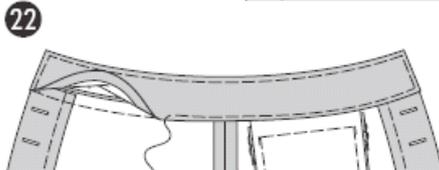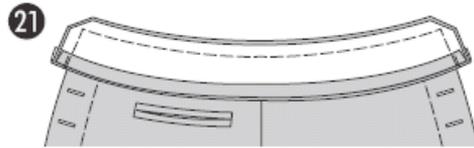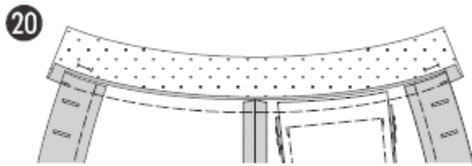

### Front waistband

**20)** Baste front waistband including interfacing onto the front pant pieces (seam 1) and stitch. Press allowances inwards towards the waistband.

**21)** Fold and press the allowances of the bottom edge at the other front waistband (without interfacing). Pin this waistband on top of the already stitched waistband, right sides facing. Baste upper and side edges on top of each other. Trim allowances, cut corners diagonally.

**22)** Turn waistband. Baste edges, press and stitch narrowly all around, thereby stitching the inner half of the waistband. Sew the buttonholes.

**23)** Baste back waistband pieces including the interfacing onto the back pant pieces (seam 3) and stitch. Press allowances inwards towards the waistbands.

### Center Back Seam

**24)** Move the pant legs (one folded inside out, one inside the other one). Baste the center back seam (also at the waist) and stitch. Neaten allowances and press apart starting from the top to the beginning of the rounded part (crotch). Position the back waistband pieces (without interfacing) on top of each other, right sides facing, sew center back seam.

**Double the back waistband** according to the text and drawing numbers 21 and 22.

### Belt

**25)** Position the front and back parts of the belt on top of each other, right sides facing, baste edges on top of each other and stitch, thereby leaving an opening to reverse the belt. Baste edges, press and stitch narrowly. Sew the buttonholes into the front part of the belt.

**26)** Pin the back part of the belt, meeting the lines, onto the back waist band, pin the ends to the extension of the underlap seam. Apply **BUTTONS**, fitting the buttonholes, onto the underlap and the back waistband. Button up the slit, and fix and button up the front part of the belt onto the waistband.

### Pant cuff

**27)** Neaten bottom pant edge, fold inwards and baste along the **CUFF FOLD LINE**, press and stitch.

**28)** Turn the bottom pant edge outside along the **HEM FOLD LINE**. Baste cuff, press, and possibly secure with some stitches on inner and outer leg seam..