



Burda Download Pattern Easy Fashion Pants 9175- Instructions

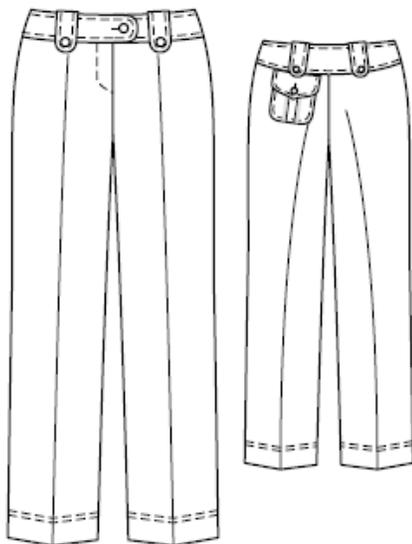

Schnittteile 1 bis 6

Gr. 34 ××××××××××××××××××
 Gr. 36 ○○○○○○○○○○○○○○○○○
 Gr. 38 - - - - -
 Gr. 40 _____
 Gr. 42 - - - - -
 Gr. 44 _____

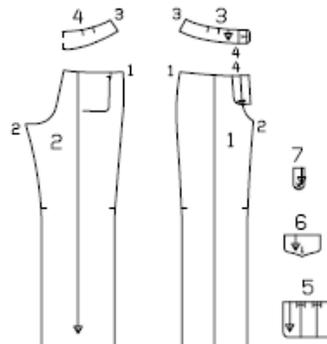

Sizes 2 (EU 34), 4 (EU 36), 6 (EU 38), 8 (EU 40), 10 (EU 42), 12 (EU 44):

Pant Length: 43 inches (107cm)
 The waistband sits about 1.5 inch (1.5 cm) below the waist. Seam width: about 21 inches (52cm)

You need:

Linen, 60 inches (150 cm) wide for all sizes
 0,35 Vlieseline G785, 36 inches (90cm) wide.
 1 Zip, 4 inches (10 cm) long.
 Six buttons. Sewing thread.

Fabric recommendation: Pant fabrics

Cutting the Print Outs:

The pattern pieces are printed onto 28 sheets of paper, each with a thin frame.
 Wait until all sheets have Printed. Arrange the pattern sheets according to the layout provided.
 Cut each sheet at the upper and right edge along the thin frame lines. Start with the lower left sheet and glue the sheets together neatly at the thin frame line.
 Choose your size according to the Burda size chart:
 Dresses, blouses, jackets and coats according to your bust size, pants and skirts according to your hip size.
 If necessary, change the paper pattern so that it reflects the number of inches that your measurements differ from the measurement chart.


Cut the pattern pieces for the design you wish to sew According to your size.

The dotted line for the zipper in part 1 is only depicted for a size 2 (EU 34). For all other sizes, draw the dotted line
 At the same distance from the front middle as in a size 2.

Pay attention to the length of the slit.

Pattern Layout

**Linen, 60 inches (150 cm) wide
 Sizes 2 to 12**

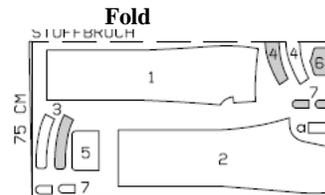

Selvage

Fold fabric according to pattern, the right side is facing in.

Cutting

The cutting layouts below show, how to arrange the pattern pieces on the fabric. Make sure that the grain of the fabric runs parallel with the selvage of the fabric.

Important: The pattern pieces include seam allowances of 0.5 inch (1.5 cm) and hem allowances of 3 inches (7cm).

Fabric

- 1 Front Pant Piece 2x
- 2 Back Pant Piece 2x
- 3 Front Seam 4x
- 4 Back Seam at Fold 2x
- 5 Pocket 1x
- 6 Flap 2x
- 7 Latch 8x

a.) left slit underlap is 4.5 inches (11cm) long, 2 inches (5cm) wide, finished width is 1 inch (2.5cm).

Interfacing

All parts that are depicted as grey areas in the pattern layout, should be cut from lining with the same grain as the fabric parts. Iron the interfacing onto the left side of the outer waistband pieces and the outer flap pieces.

Transferring Pattern Markings Onto the Fabric

Transfer the lines and markings of the pattern, except the grain, onto the left side onto the fabric with a tracing wheel and Burda tracing paper (see instructions that come with tracing paper).

Transfer the dotted line for the zipper, the front middle, the fold and connecting lines and the line CREASE onto the right side of the fabric, stitching in large stitches along those lines by hand.


Sewing




When pinning and stitching the seams, the right sides of the fabric are facing. Seam allowance is 5/8 inch (1.5 cm) wide. Secure the seam beginning and end with reverse stitches.

1.) Pocket

For the creases, fold the pocket so that the marked stitching lines meet, left side inside. Stitch along the marked stitching lines (1). Fold apart the pockets and iron the crease, so that the crease middle meets the stitching lines (2). Baste pocket all around. Fold over the seam allowance of the upper pocket edge to the inside and stitch neatly

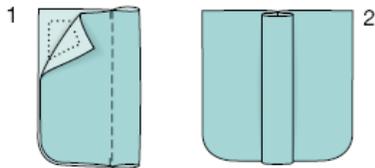

Fold the seam allowances of the remaining pocket edges over to the inside (3)

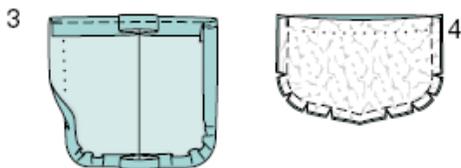

Pin the pocket onto the back left pant piece so that it meets the base lines, stitch neatly, 7mm wide.

2.) Flap

Pin flap pieces on top of each other, right sides facing. Stitch, leave the base seam open, trim seam allowances, cut in at the rounded edges (4).


Turn flap. Pin edge, iron and stitch neatly, 7 mm wide. Sew in button hole. Pin the flap in between the vertical lines of the seam allowances on the left back pant piece.

3.) Crease at the front pant pieces

Fold the front pant pieces at the line CREASE, left side inside. Iron crease.

4.) Side Seams


Place the front pant pieces onto the back pant pieces, right sides facing, pin side seams. Stitch, starting at about 5 cm below the upper pant edge. Secure the seam beginning and end (5).

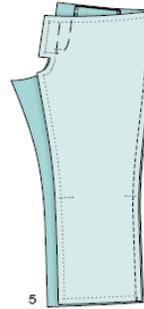

The remaining side seams won't be sewed until the waistband has been attached. Fold apart, iron and baste seam allowances.

5.) Inner Leg Seams

Fold the pant pieces lengthwise, right side inside. Pin inner leg seams. Stitch (6). Fold apart and iron seam allowances, baste. Turn over the pant legs, right side outside.

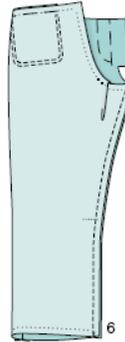


6.) Crease, back pant pieces

Place the pant pieces onto the ironing board, so that the inner leg seam meets the side seam and the front crease is completely straight. Iron crease into the back pant piece (7).

7.) Front Middle Seam

Baste the seam allowances of the front facings, the front middle and the back


middle seams, consecutively. Turn one pant leg, left side outside. Push pant legs into each other, right fabric sides and inner leg seams meet. Pin the front middle seam coming from the arrow mark until you reach the inner leg seam. Stitch. Secure seam end and beginning (8). Pull the pant legs apart again.

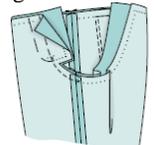

8.) Zipper Slit



Women's pants close from right to left. That means that you have to pin

the facing at the Marked front middle over to the inside. Pin the facing over to the inside at the left slit edge, 5 mm next to the front middle, so that the zipper won't show. Make sure to cut the seam allowances at the end of the slit (arrow) until you are at about 5mm from the seam. Iron edges (9).

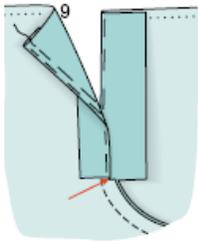


Pin the left slit marking close to the zipper teeth onto the zipper band and stitch neatly with the zipper foot of your sewing machine (10)

Pin slit closed middle on middle (11). Pin the facing of the right pant piece to the second zipper band, do not take in the pants when doing this. Stitch the

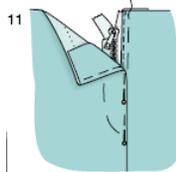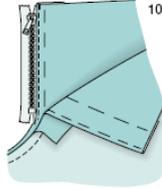


Zipper onto the facing (12). Coming from the right side of the pants, stitch the right closing edge at the marked stitching line going from the top until you reach the beginning of the rounded edge, taking in the facing (13).

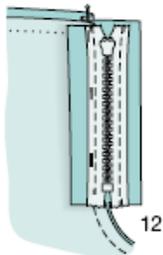


Fold the under lap (a) in half lengthwise, right side inside. Stitch the lower edges onto Another. Trim seam allowances. Fold over the under lap, pin and iron edges. Baste the open long edges that are held together.

Pin the under lap onto the seam allowance of the left slit edge from the inside so that the basted edge is lying

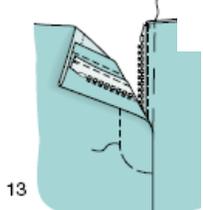

on the zipper band and the selvage is lying 3 cm away from the front middle (14). Stitch the facing of the left slit edge onto the under lap close to stitching line (15). Close zipper.



Pin the slit closed middle on middle once again and stitch the remaining zipper closure stitching line, taking in the under lap, too. Pull thread to the inside and tie.

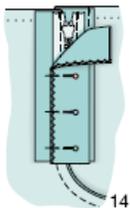

9.) Back Middle Seam:

Push the pant legs into each other, right sides facing. Pin the back middle seam, seam lines meet. Stitch (16). Secure seam ends.


Tip: Since the middle seam will be strained, stitch the seam twice with the stretch or triple stitch (see instructions of your sewing machine). Fold apart and iron the seam allowances starting at the top until you reach the beginning of the crotch.

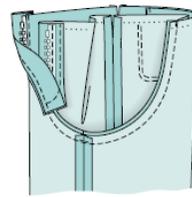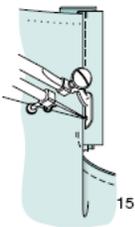

10.) Attaching the Waistband

Pin the front waistbands with interfacing right sides facing onto the front pant pieces, allowing the front right waistband end to overlap. Pin the left front waistband end onto

the under lap. Stitch. Cut the left front waistband 5/8 inch (1.5 cm) next to the line that says "left edge" (17).

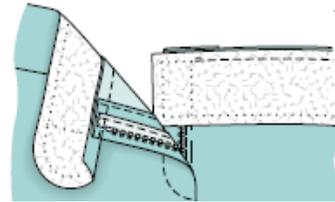

Pin the reinforced back left waistband onto the back pant piece. Stitch. Trim seam allowances back to 5mm, iron into the waistband pieces. Place the front pant pieces right sides facing onto the back pant pieces, pin the remaining side seams and consecutively the side seams of the waistband. Stitch. Fold apart and iron seam allowances.

11.) Latch

Pin the latch pieces with interfacing onto the latch pieces without interfacing right sides facing. Stitch, leaving the base edges open. Trim seam allowances, cut in several times at the rounded edge (18).




Turn latch. Pin edges, iron, stitch neatly, allowing 7 mm. Pin the open latch ends in between the vertical

Line on the seam allowance of the upper waist band edge.


12.) Doubling the Waistband

Stitch the side seams at the waistband pieces that are not reinforced with interfacing. Fold apart and iron seam allowances. Place the waistband that is not reinforced right sides facing onto the waistband that is reinforced, pin the upper edges and front edges onto each other. When doing this, place the seam allowance of the base seam downward at the right front end of the waistband. Stitch coming from the reinforced waistband (19).

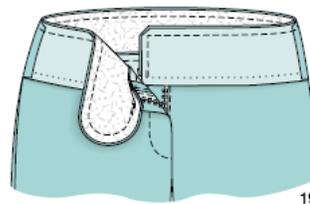

Trim seam allowances, cut in at the rounded edges, cut diagonally at the edges. Turn the waistband that is not reinforced over to the

Inside. Pin edges. Pin the upper waistband folded in onto the base seam. Stitch the around the waistband, allowing 7 mm, coming from the right pant piece and stitching the inner half at the base seam (20). Add in the button hole into the right front edge of the waistband (see instructions of your sewing machine). Attach the button at the left front edge waistband. Place the latch downward. Sew the small buttons onto the latch ends, taking in the pants.

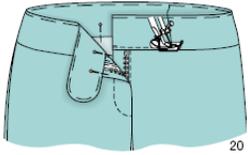

13.) Hem

Baste seam allowances, fold over to the inside and pin, then iron. Stitch the lower pant leg allowing 2.5 inches (6 cm and 6.7 cm), stitching the seam allowances. Iron the creases at the lower pant legs again.