

burda Download-Pattern Jacket 8027 – Instructions





very easy


semi-fitted

Sizes	US Eur.	59 ins / 150 cm							
		10 36	12 38	14 40	16 42	18 44	20 46	22 48	
	ys	2 ¹ / ₄	3						
	m	2.35	2.40	2.45	2.50	2.55	2.60	2.70	
		*	*	*	*	*	*	*	

★ without nap

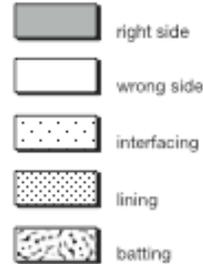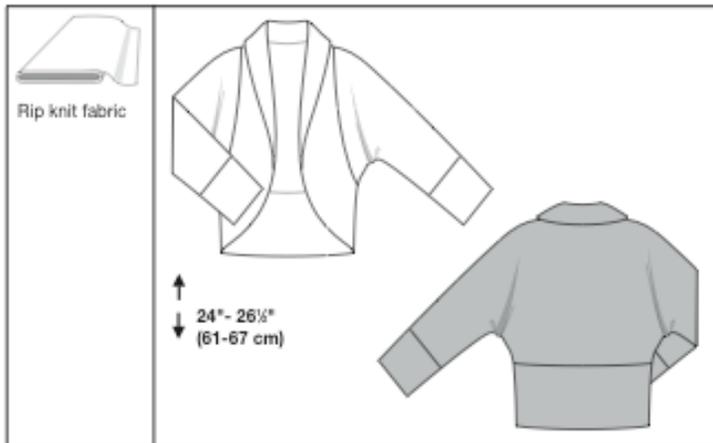

Pattern pieces:

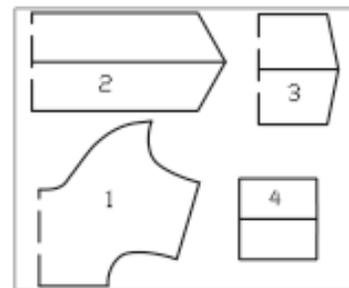

Pattern Pieces

1 Jacket Front Piece	1x
2 Placket	1x
3 Back Placket	1x
4 Sleeve Placket	2x

Copy Paper with DinA4 Print:

The pattern pieces are printed with a narrow border onto 35 pages. Wait until all pages are printed. Arrange the pages as depicted in the page with instructions on how to put the pages together.

Cut the pages at the upper right edge along the narrow border. Start with the lower left page and glue the pieces together at the border lines.

Choose the size of the patter according to the Burda measurement chart. The sizes for dresses, Blouses, Jackets and Coats are determined by the bust measurement, the sizes for pants and skirts are determined by the hip measurement.

Adjust, if necessary, if your measurements differ from the Burda measurement chart.

Cut the pattern pieces for your size.

Cutting out

Fabric Fold (-----) means: This is the middle of a pattern pieces, not an edge or a seam. The piece is cut twice the size of the pattern; the fabric fold is the middle axis of the piece.

The pattern pieces with interrupted outlines are placed onto the fabric with the printed side facing down.

The cutting plans show how to arrange the pattern pieces on the fabric.

If fabric is not folded, pin the pattern pieces to the right side.

If fabric is folded, pin the pattern pieces with the right side of the fabric facing inside. Pin pattern pieces on wrong side.
Place cutting plan over the selvage, finally, cut with fabric not folded.

Seam and Hem Allowances are included in the pattern:

1.5 cm (1/2 inch) at all edges and seams

Cut Fabric Folded:

Fold the fabric in half **lengthwise**; the right side is facing inside. The selvage lines are facing each other. Pin pattern piece 1, as depicted in the copy paper, onto the wrong side of the fabric. Cut pattern pieces.

Fold the remaining fabric in half **the other way**, the right side is facing inside and the selvage lines are facing on each side. Pin pattern pieces 2 to 4 onto the wrong side of the fabric, as depicted in the copy paper. Cut pattern pieces.

Marking






Before you remove the pattern pieces from the fabric, please draw all important markings and lines on the pattern pieces, for example the selvage lines and the horizontal lines. This is easiest using Burda tracing paper and a tracing wheel (see instructions in package) or using pins and tailor's chalk. Transfer the wrap lines with basting stitches onto the right side of the fabric.

Sewing

When sewing, the right sides of the fabric are facing.

Instructions on how to work with knit fabrics

De-baste the seam allowances with an overlock-machine or the overlock stitch of your sewing machine. To maintain the stretchiness of the fabric, stitch the seams with an elastic stitch or with a narrow zigzag stitch. Make sure that the thread tension of the sewing machine is not set too high.

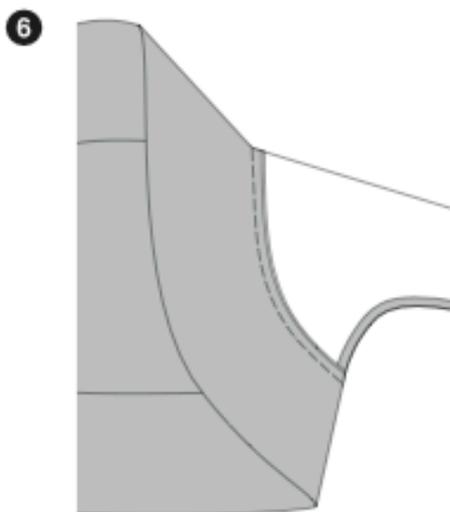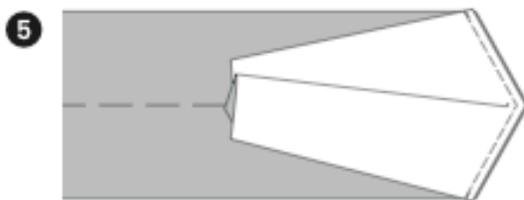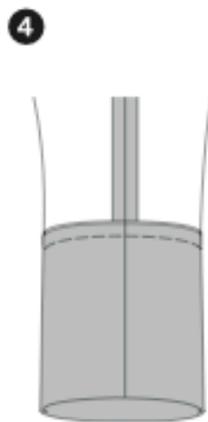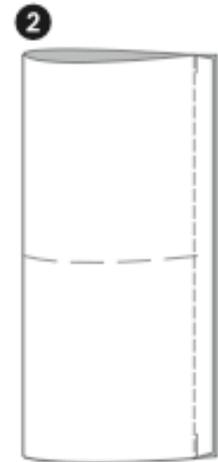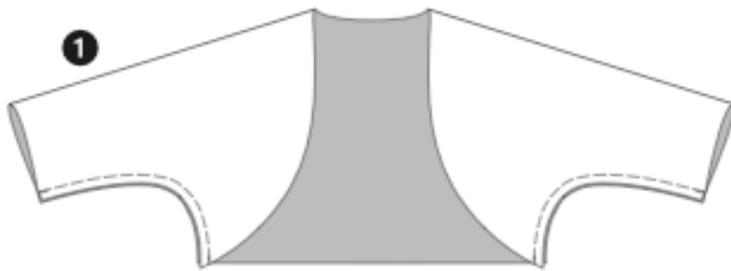

Jacket

Side and Bottom Sleeve Seams

- 1.) Fold the jacket piece at the marked shoulder, right side inside. Pin the side and bottom sleeve seam (Seam Number 1) and stitch. De-baste seam allowances and finish them, iron.

Sleeve Plackets

- 2.) Fold the placket, right side inside. Pin seam (Seam Number 2) and stitch. Fold apart and iron seam allowances.
- 3.) Fold the placket at the WRAP LINE, wrong side inside. Pin open edges onto each other.
- 4.) Pin placket right sides facing onto the lower sleeve edge (Seam Number 3), seams are meeting. Stitch. De-baste seam allowances and iron to top.

Placket

- 5.) Place back placket right sides facing onto the placket, pin **side seams** (Seam Number 4) and stitch. Finish the seam allowances coming from the edge going To the wrap line. Fold placket in half at the WRAP LINE, wrong side inside. Pin open edges onto each other.
- 6.) Place placket right sides facing and middle on middle onto the outer jacket Edge (Seam Number 5), side seams are meeting. The horizontal lines meet Marked shoulder lines. Pin placket, holding the placket in place at the front Piece and arm line. Stitch placket with elastic stitch or with flat zigzag stitches. De-baste seam allowances and iron jacket.

